

Buttons robot

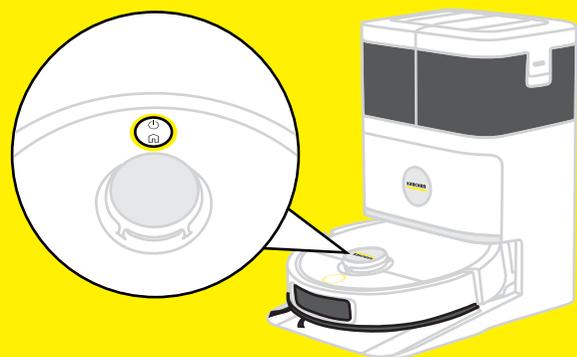


On/Off

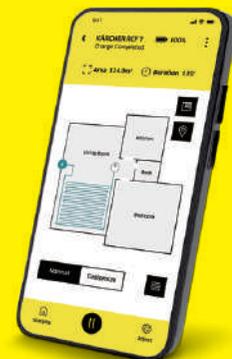
Press for start or pause
Press (3 sec) for turn on/off
Press together with Home (3 sec)
for WLAN connection

Home

Press to send robot to station
Press together with On/Off (3 sec)
for WLAN connection



Kärcher Indoor Robots App



9.778-351.0

KÄRCHER

RVM 4 COMFORT QUICKSTART GUIDE



Scan for details

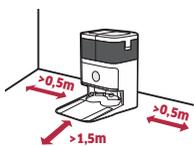


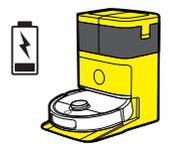
www.kaercher.com/int/home-garden/robot-vacuums-and-mops.html

Operating Instructions

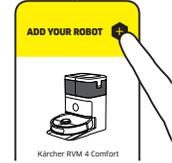


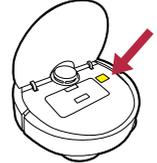
Install device

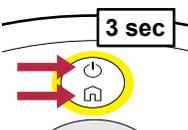
- 

Consider correct positioning
- 

Place the robot in Multifunctional station
- 

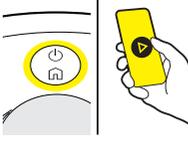
Download Kärcher Indoor Robots App
- 

Add robot
- 

Scan QR code
- 

Press On/Off and Home to connect to WLAN
- 

Network configuration
- 

Device is now ready for use
- 

Start mapping
- 

Follow the configuration steps in the App
- 

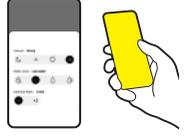
Device is now ready to clean

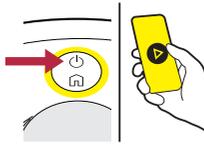
Start cleaning

- 

Detach fresh water tank
- 

Fill fresh water container
- 

Attach fresh water tank
- 

Select cleaning mode and setup the cleaning parameters
- 

Start cleaning

Cleaning of station

- 

Detach dirt water container
- 

Empty and clean dirt water container
- 

Attach dirt water container
- 

Detach fresh water tank
- 

Refill fresh water container
- 

Attach fresh water tank

Changing of filter bag (optional, when needed)

- 

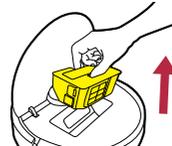
Open the front cover
- 

Detach filter bag
- 

Dispose filter bag
- 

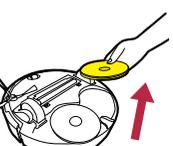
Attach new filter bag

Cleaning of robot

- 

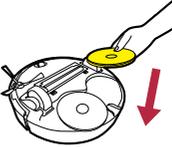
Detach dry dust box
- 

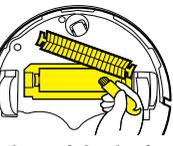
Clean dry dust box and filter
- 

Attach dry dust box
- 

Remove mopping discs
- 

Detach mopping cloth
- 

Wash mopping cloth
- 

Attach mopping discs
- 

Clean main brush unit